


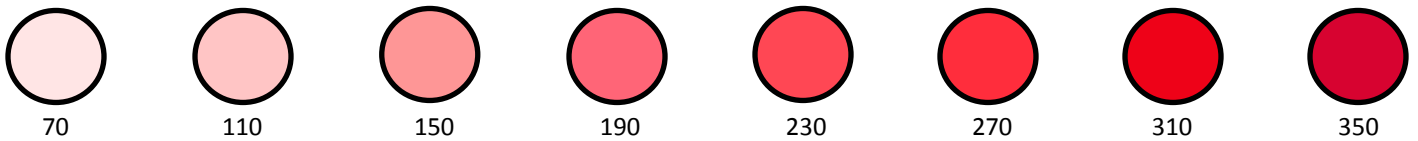

QM PRESSURE DECAL INSTRUCTIONS

1. Remove 1 “donor” disc and 1 “receiver” disc. The donor decal has a textured and a smooth side. The receiver decal has a textured side and a clear side.
2. Cut a slit in each of the discs in order to easily install on the shock shaft.
3. Place the 2 discs together so that the textured side of the “donor” and the textured side of the “receiver” sheet are in contact with each other.
4. Place the pressure decal “sandwich” around the shaft where you want to measure the force.
5. The color the film turns is directly proportional to the amount of force applied. Match the exposed fil to the color calibration chart below.



QM PRESSURE DECAL INSTRUCTIONS

1. Remove 1 “donor” disc and 1 “receiver” disc. The donor decal has a textured and a smooth side. The receiver decal has a textured side and a clear side.
2. Cut a slit in each of the discs in order to easily install on the shock shaft.
3. Place the 2 discs together so that the textured side of the “donor” and the textured side of the “receiver” sheet are in contact with each other.
4. Place the pressure decal “sandwich” around the shaft where you want to measure the force.
5. The color the film turns is directly proportional to the amount of force applied. Match the exposed fil to the color calibration chart below.

